

**LF200-3B F-01 灯具 LIGHTS**

F-01 灯具 LIGHTS



Parts No.	PartName	Description	Unit
KPMF01-01	前照灯总成	Headlight Assy	PC
KPMF01-02	前左转向灯	Winker, front, LH	PC
KPMF01-03	前右转向灯	Winker, front, RH	PC
KPMF01-04	后右转向灯	Winker, rear, RH	PC
KPMF01-05	后左转向灯	Winker, rear, LH	PC
KPMF01-06	尾灯总成	Taillight Assy	PC
KPMF01-07	牌照灯组合	Light comp., license plate	PC



**LF200-3B F-03 握把 开关 GRIP & SWITCH**

**F-03 握把 开关 GRIP & SWITCH**



Parts No.	PartName	Description	Unit
KPMF03-01	油门拉索	Cable comp., throttle	PC
KPMF03-02	离合器拉索	Cable, clutch	PC
KPMF03-03	方向把管组件	Bridge, upper	PC
KPMF03-04	油门握把组合	Grip comp., throttle	PC
KPMF03-05	左握把	Grip, LH	PC
KPMF03-06	右手把开关	Switch, handlebar, RH	PC
KPMF03-07	左手把开关	Switch, handlebar, LH	PC
KPMF03-08	右后视镜	Mirror, rearview, RH	PC
KPMF03-09	左后视镜	Mirror, rearview, LH	PC
KPMF03-10	离合器手柄组合	Lever set, clutch	PC

LF200-3B F-04 方向柱 STEERING STEM


F-04 方向柱 STEERING STEM



Parts No.	PartName	Description	Unit
KPMF04-01	方向柱组件	Stem set, steering	SET
KPMF04-02	上轴承上盖	Steering Stem Bearing Set	PC
KPMF04-03	方向轴承组件	Pipe set, steering bar	PC
KPMF04-04	上轴承下盖	Lug, speed sensor	PC
KPMF04-05	下轴承下盖	Pipe set, steering bar	PC
KPMF04-06	点火开关支架组件	Stay set, ignition switch	PC
KPMF04-07	上联板组件	Bridge set, steering stem top	PC
KPMF04-08	方向柱上装饰盖	Cushion Cover, Steering Stem	PC
KPMF04-09	右方向把卡夹	Clamp, steering bar, RH	PC
KPMF04-10	左方向把卡夹	Clamp, steering bar, LH	PC
KPMF04-11	方向把管固定座组件	Holder set, steering bar pipe	PC
KPMF04-12	方向柱上减震垫	Upper Cushion, Steering Stem	PC

**LF200-3B F-05 前挡泥板 减震器 FRONT FENDER & SHOCK ABSORBER**

F-05 前挡泥板 减震器 FRONT FENDER & SHOCK ABSORBER

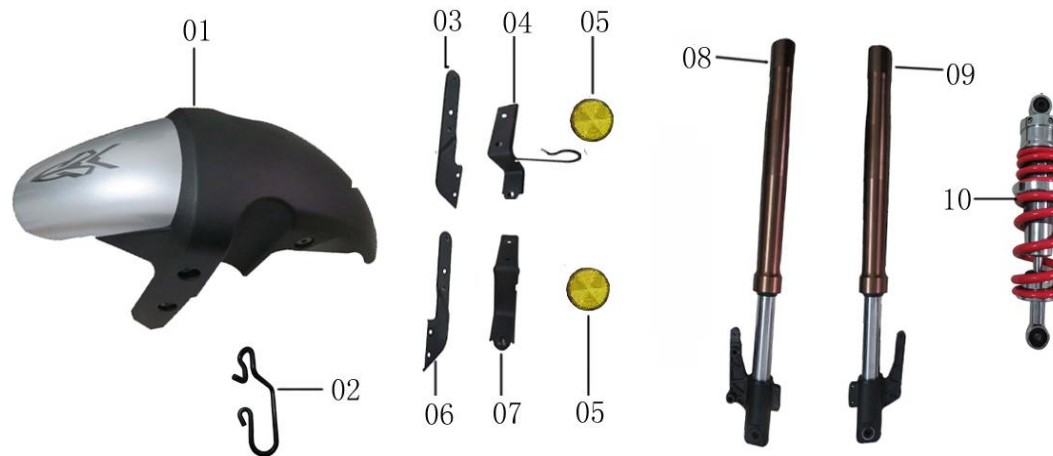

Parts No.	PartName	Description
KPMF05-01	前挡泥板	Front Fender
KPMF05-02	线钩	Wire Holder (Front Brake )
KPMF05-03	前右挡泥板支架组件	front right fender braket comp.
KPMF05-04	反射器右支架组件	side reflector braket comp. RH
KPMF05-05	前反射器	Reflector, front
KPMF05-06	前左挡泥板支架组件	front left fender braket comp.
KPMF05-07	侧反射器支架组件	side reflector braket comp. LH
KPMF05-08	前右减震器	Shock absorber, front, RH
KPMF05-09	前左减震器	Shock absorber, front, LH
KPMF05-10	后减震器总成	Shock absorber Assy, rear

Unit
PC
PC
PC
PC
PC
PC
PC
PC
PC

**LF200-3B F-06 散热器护板 FUEL TANK GUARD**

F-06 散热器护板 FUEL TANK GUARD



Parts No.	PartName	Description
KPMF06-01	散热器护罩	Hood, radiator
KPMF06-02	油箱左装饰罩 II	Ornament II, fuel tank, LH
KPMF06-03	油箱右装饰罩 II	Ornament II, fuel tank, LH
KPMF06-04	油箱右内装饰罩	Ornament, fuel tank inner, RH
KPMF06-05	油箱左内装饰罩	Ornament, fuel tank inner, LH
KPMF06-06	油箱右装饰罩	Ornament, fuel tank, RH
KPMF06-07	油箱左装饰罩	Ornament, fuel tank, LH

Unit
PC
PC
PC
PC
PC
PC
PC



**LF200-3B F-08 侧盖 SIDE COVER**

F-08 侧盖 SIDE COVER




Parts No.	PartName	Description
KPMF08-01	左侧盖装饰罩	Ornament, side cover, LH
KPMF08-02	右侧盖装饰罩	Ornament, side cover, RH
KPMF08-03	右侧盖组件	Cover set, side, RH
KPMF08-04	左侧盖组件	Cover set, side, LH
KPMF08-05	左装饰罩护网	Gauze, ornament, LH
KPMF08-06	右装饰罩护网	Gauze, ornament, RH

Unit
PC
PC
PC
PC
PC
PC



**LF200-3B F-10 后叉 REAE FORK**

F-10 后叉 REAE FORK

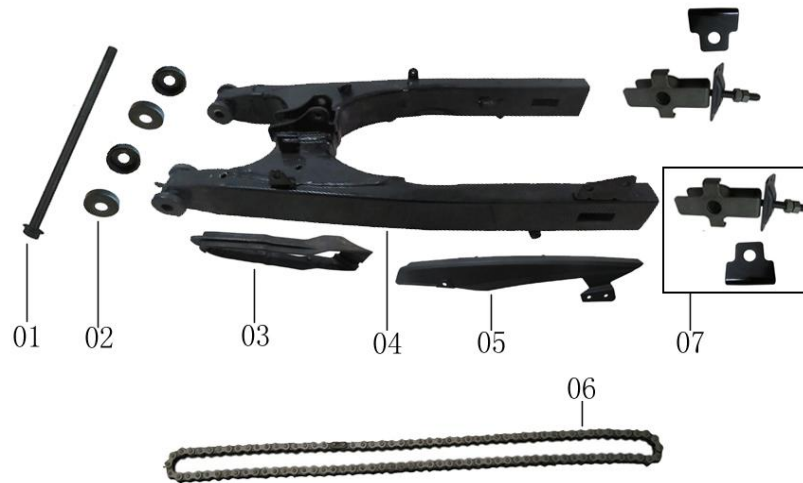


Parts No.	PartName	Description
KPMF10-01	后叉轴 M14×1.5×295	Shaft, rear fork
KPMF10-02	后叉轴防尘盖组件	Dust cover, rear fork shaft
KPMF10-03	链条护卡	Guide, chain
KPMF10-04	后叉组合	Fork comp., rear
KPMF10-05	链盒	Chaincase
KPMF10-06	链条428MH×128	Chain, 428MH×128
KPMF10-07	链条调节器组合	Adjuster set, chain

Unit
PC
PC
PC
PC
PC
PC
PC

**LF200-3B F-11 后轮 REAR WHEEL**

F-11 后轮 REAR WHEEL

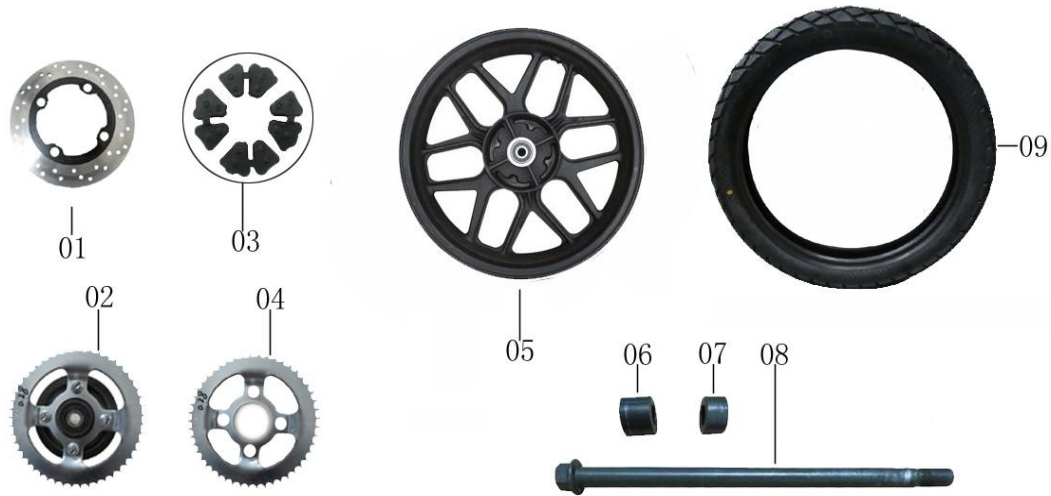

Parts No.	PartName	Description
KPMF11-01	后制动盘	Disc, rear brake
KPMF11-02	链轮毂总成	Hub Assy, sprocket
KPMF11-03	后轮缓冲块	Buffer, rear wheel
KPMF11-04	链轮	Sprocket
KPMF11-05	后轮毂组合	Rim, rear wheel
KPMF11-06	后轮左衬套	Rear Wheel Bush, LH
KPMF11-07	后轮右衬套	Rear Wheel Bush, RH
KPMF11-08	后轮轴M14×1.5×275	Axle, rear
KPMF11-09	后轮外胎	Tyre, rear

Unit
PC
PC
PC
PC
PC
PC
PC
PC

**LF200-3B F-12 后挡泥板 SEAT & REAR FENDER**

F-12 坐垫 后挡泥板 SEAT & REAR FENDER




Parts No.	PartName	Description
KPMF12-01	后挡水胶皮	Flap, rear mud
KPMF12-02	后挡泥板前体	Head, rear fender
KPMF12-03	后挡泥板中体	Body, rear fender mid
KPMF12-04	座垫后连接板组件	Plate set, seat rear connecting
KPMF12-05	后挡泥板后体	Tail, rear fender
KPMF12-06	后反射器	Reflector, rear
KPMF12-07	座垫总成	Seat Assy
KPMF12-08	后挡泥板后装饰板	Ornament, rear fender rear

Unit
PC
PC
PC
PC
PC
PC
PC
PC

**LF200-3B F-13 空滤器 排气消声器 AIR CLEANER & EXHAUST MUFFLER**

F-13 空滤器 排气消声器 AIR CLEANER & EXHAUST MUFFLER

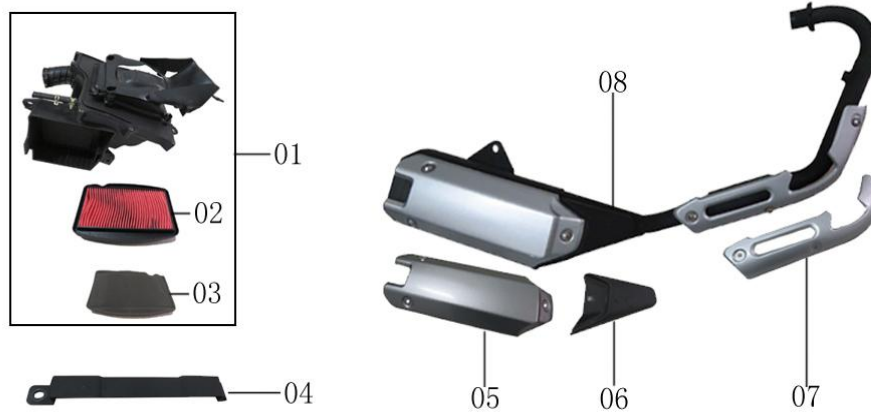


Parts No.	PartName	Description
KPMF13-01	空气滤清器总成	Cleaner Assy, air
KPMF13-02	空滤器滤芯组件	Element, air cleaner
KPMF13-03	空滤器滤芯 II	Element II, air cleaner
KPMF13-04	蓄电池压板组件	Plate set, battery pressing
KPMF13-05	消声器护罩	Mantle, muffler
KPMF13-06	消声器装饰罩组件	Ornament set, muffler
KPMF13-07	排气管护罩	Hood, exhaust pipe
KPMF13-08	排气消声器总成	Exhaust muffler Assy

Unit
PC
PC
PC
PC
PC
PC
PC
PC

LF200-3B F-14 前后制动器 FRONT & REAR BRAKE

F-14 前后制动器 FRONT&REAR BRAKE

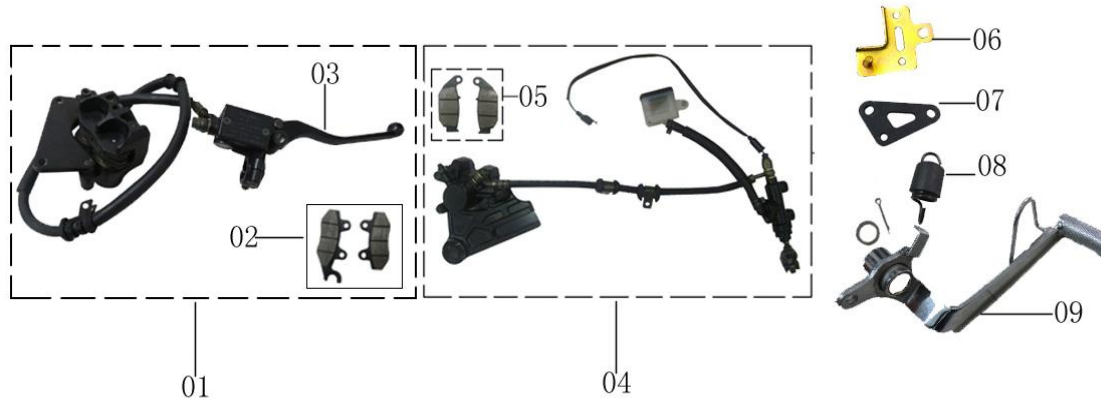

Parts No.	PartName	Description
KPMF14-01	前液压制动器组合	Brake comp., front hydraulic
KPMF14-02	前制动蹄片	Front Brake Shoe Set
KPMF14-03	前制动手柄	Front Brake Lever
KPMF14-04	后液压制动器组合	Rear Hydraulic Disc Brake
KPMF14-05	后制动蹄片	Rear Brake Shoe Set
KPMF14-06	后制动油杯安装支架组件	Bracket set, rear brake reservoir
KPMF14-07	后制动弹簧挂板	Hanging Plate,Rear Brake Spring
KPMF14-08	后制动踏板回位簧组件	Spring set, rear brake pedal
KPMF14-09	后制动踏板组合	Pedal, rear brake

Unit
PC
PC
PC
PC
PC
PC
PC
PC



LF200-3B F-16 车架总成 FRAME BODY

F-16 车架总成 FRAME BODY



Parts No.	PartName	Description
KPMF16-01	车架焊接总成	Body weldment, frame
KPMF16-02	发动机前连板组件	Plate set, engine front connecting
KPMF16-03	侧支架	Stand, side
KPMF16-04	右后扶手	Handrail, RH
KPMF16-05	左后扶手	Handrail, LH
KPMF16-06	后挡泥板前体前支架组件	Bracket, rear fender front body front
KPMF16-07	锁具总成	Lock Assy

Unit
PC
PC
PC
PC
PC
PC
PC



LF200-3B F-18 电器 ELECTRICAL ELEMENTS

F-18 电器 ELECTRICAL ELEMENTS



Parts No.	PartName	Description
KPMF18-01	主电缆	Cable, main
KPMF18-02	喇叭	Horn
KPMF18-03	闪光继电器	Relay, flashing
KPMF18-04	电喷主继电器	EFI Relay
KPMF18-05	蓄电池	Battery, 12N9-BS

Unit
PC
PC
PC
PC
PC



LF200-3B F-20 电喷系统 ELECTRONIC FUEL INJECTION SYSTEM

F-20 电喷系统 ELECTRONIC FUEL INJECTION SYSTEM



Parts No.	PartName	Description	Unit
KPMF20-01	电喷控制器 (ECU)	Efi controller	PC
KPMF20-02	氧传感器	Oxygen sensor	PC
KPMF20-03	油轨组合	Rail, fuel	PC
KPMF20-04	节气门阀体总成	Throttle body	PC
KPMF20-05	炭罐阀组合	Idle valve (carbon canister)	PC
KPMF20-06	空温传感器	Air temperature sensor	PC
KPMF20-07	进气管组件	Intake manifold comp	PC
KPMF20-08	喷嘴	Injector	PC
KPMF20-09	进气压力传感器	Intake pressure sensor	PC
KPMF20-10	怠速补气阀进气管	Pipe, idling gulp valve inlet	PC
KPMF20-11	进气压力传感器安装支耳	Lug, intake air pressure sensor	PC
KPMF20-12	节气门压力采集管	Pipe, pressure collecting	PC
KPMF20-13	怠速补气管	Pipe, idling gulp	PC